


- NOTES FOR FOOTING STEEL PLACEMENT
- 1.) FOOTING TEMPERATURE AND SHRINKAGE STEEL (T&S) TO BE EXTENDED INTO THIS REGION FROM BOTH SIDES OF CORNER. REGION IS OUTSIDE EXTENSION OF WALLS INCLUDING WALL THICKNESS.
 - 2.) STRENGTH STEEL IS EXTENDED INTO THIS REGION FROM BOTH SIDES OF CORNER. REGION IS INSIDE EXTENSION OF THE WALLS. FOOTING SLAB T&S STEEL OUTSIDE THE CORNER REGION TO LAP SPLICE WITH THE STRENGTH STEEL 16 INCHES.
 - 3.) IN BOTH CORNER REGIONS, STRENGTH STEEL AND T&S STEEL WILL REQUIRE SWITCHING POSITIONS FROM TOP TO BOTTOM AND VICE VERSA.

SLAB FOOTING CORNER DETAIL

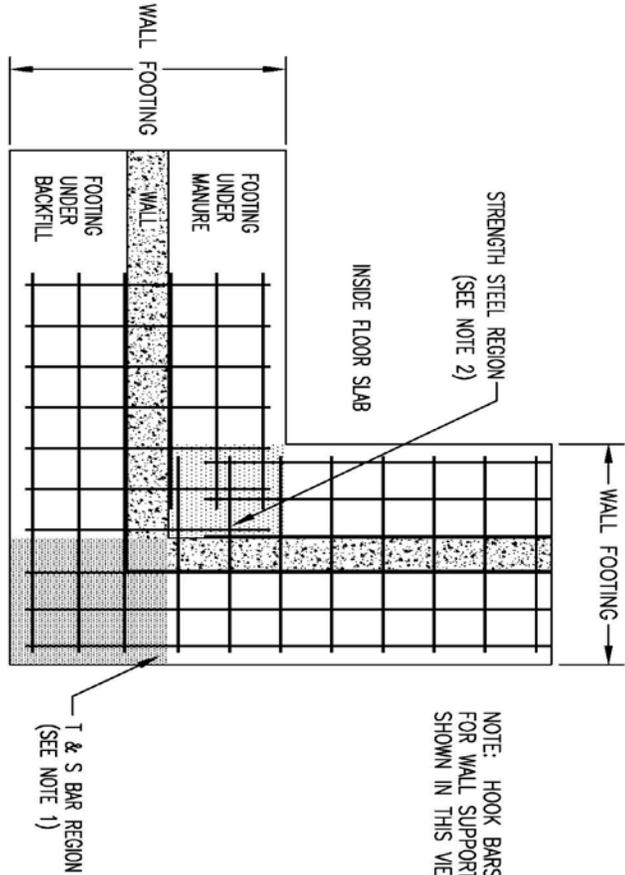

NOTE: HOOK BARS USED FOR WALL SUPPORT NOT SHOWN IN THIS VIEW.

(ADAPTED FROM WI-571, APRIL 2005)